

Quickstart Instructions

Note: *This feature is completely optional, it need not be implemented, and your radio will operate perfectly normally without it.*

Navigate to registry key HKLM\Software\OpenHPSDR\Thetis-x64.

Add a new 'String Value' with the name ASIOdrivename.

Populate the new string value with the name of your ASIO device driver.

Some popular driver names are listed below:

UMC ASIO Driver

Studio 192 ASIO

Focusrite USB ASIO

AudioBox ASIO Driver

MOTU M Series

ASIO Lynx

ULTRAVOICE ASIO Driver

If your driver name is not listed above, run hostsample.exe for clues:

<https://github.com/W4WMT/Thetis/releases/tag/v0.0>

If ChannelMaster is unable to load the ASIO driver specified in the registry key, then all TX & RX audio streams will be routed (by default) to the audio hardware codec chip in the radio.

